

## ADC-16 Quick Start

**(1)** Connect your serial cable to the 6 position terminal block on your ADC-16 as follows:

Green to terminal (T) (pin 2 on DB9)  
White to terminal (R) (pin 3 on DB9)  
Red to terminal (-) (pin 5 on DB9)  
Black to terminal (S) (optional) (pin 1 on DB9)

**(2)** Connect the PS-GP-1 to the 6 position terminal block on your ADC-16 (-) is Black (+) is Red.

**(3)** Connect your serial cable to the Com 1 RS-232 port on your PC and plug in your PS-GP-1 wall adapter. When using the CO-USB cable connected to USB, the USB driver must be installed first.

**Windows XP, Vista, Windows 7, 8 or 10:** Click the install MS .Net App button. Please note that this App requires that the Microsoft .Net framework be installed on your system. If the .Net framework is not on your system, the installation program will attempt the installation from the Microsoft web site (internet connection needed). You should install all Windows updates before the .Net framework is installed (using Windows Update).

The following option will install the test App that works with all versions of Windows: Click the install Universal App button or run setup.exe in the Windows Test Program folder. If you receive a message that the file you are installing is older than the file on your system, keep your existing file and do not overwrite (click yes). If your Windows computer is 64 bit, after installation of the test program, you must copy the ADC-16 folder (in the x86Program Files folder) to the Program Files folder so that the test program will find the adc-set.ini file.

**(4)** If the ADC-16 is connected to Com 1, you may start the test program. If you are connected to a Com port other than Com 1, enter the correct Com port when the test program is started or edit the adc-set.ini file in the Program Files\adc-16 folder or in the EECI folder (see the readme file in the same folder or on your CD). You may also set the com port within the test program by double clicking on the Com label.

**(5)** Connect the RCT-16 terminal block to ADC-16 and test the analog inputs as follows:

Connect a wire jumper from terminal 10 on the RCT-16 to terminal 1. Channel 1 should show 0. Connect the wire jumper from terminal 10 to the remaining channels 2 through 8 (one at a time). All channels should show 0 as the wire is connected.

Move the jumper wire from terminal 10 to terminal 9 and connect to terminal 1. Channel 1 should show 255. Repeat for channels 2 through 8. All channels should show 255.

Move the jumper wire from the top terminal block on the RCT-16 to the lower terminal block and repeat the above procedure for channels 9 through 16.

Additional testing may be done by using a 20 turn pot (10K or 20K) to apply an analog voltage to the inputs as shown in figure B on page 12 in the ADC-16 reference manual.

Please Note: When the ADC-16 inputs are floating (no connection) the inputs may show random or changing values from noise picked up by the inputs.

Electronic Energy Control Inc  
(800) 842-7714      www.eeci.com